


Preparation Steps




Step 1

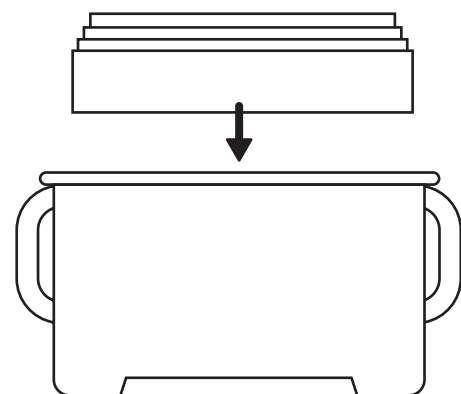


Place 10 pads into bucket.

Step 2

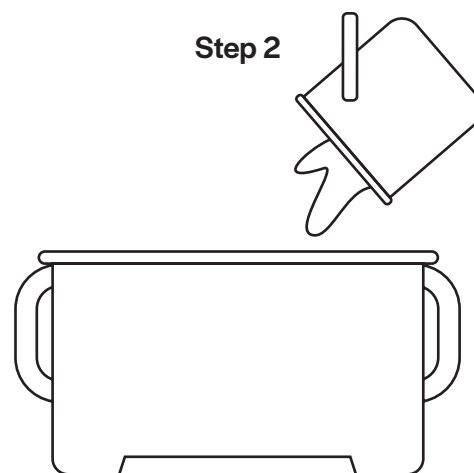


Pour 1.5L of water into bucket.

Step 3

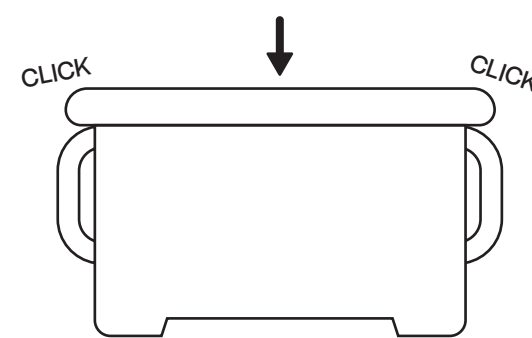


Place lid on bucket clicking into place.

Step 4

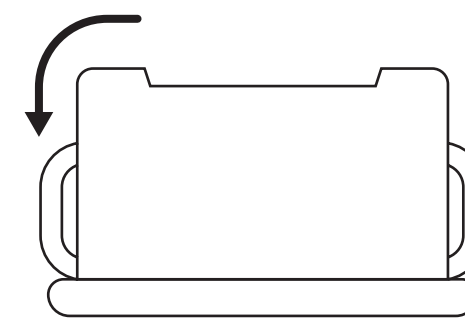


Flip bucket over.

Step 5

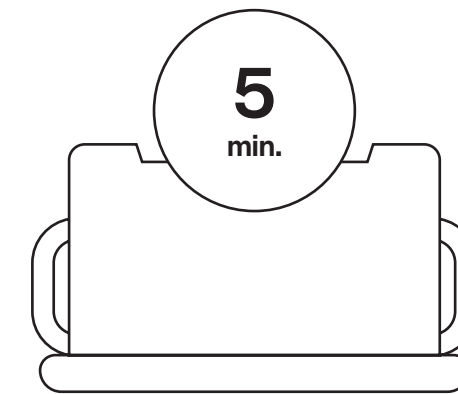


Leave 5 minutes contact time.

Step 6

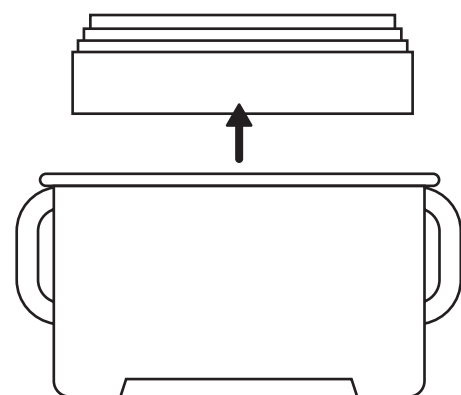


Take flat mop pads out of bucket.

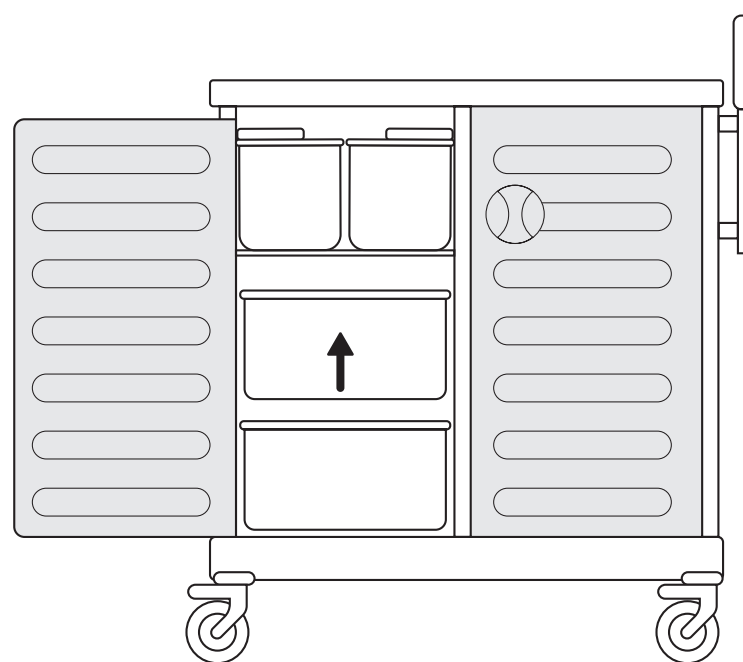


Slide out centre bucket of SYR Motion trolley.

Step 7

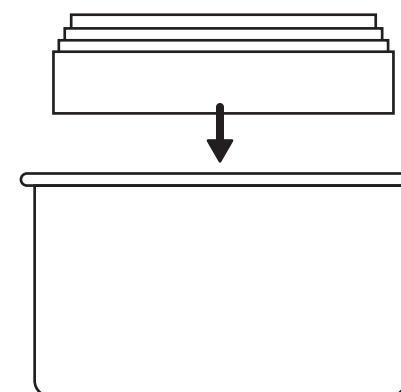


Place the dosed pads into Motion bucket & slide back into Motion trolley ready to use.

Step 8

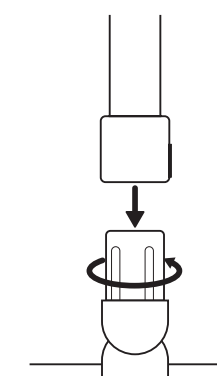

Screw Interchange handle to frame.

Step 9

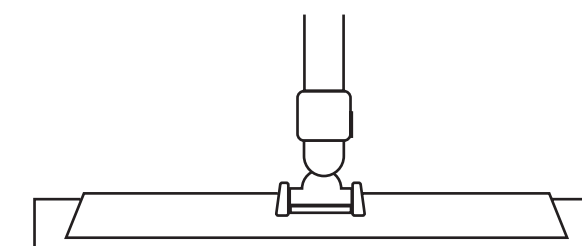

When ready to clean take out dosed pad and attach to hook and loop frame.